

# Product Data Sheet

## Rubber Floor Mats

### Instruction and safety information

Date of issue: 2024-12-05

Sheet No: 1/2024

Update: 19.12.2024

---

#### SECTION 1 Company recognition

**1.1. COMPANY:**  
Rezaw-Plast Ryszard Zawół  
Ul Leśna 46  
05-083 Zaborów  
NIP: 529 001 04 16  
REGON: 010585493

**1.2. CONTACT DETAILS:**  
www: rezaw-plast.pl  
e-mail: [sklep@rezaw-plast.pl](mailto:sklep@rezaw-plast.pl)  
tel.: (+48) 22 780 92 12

**1.3. TRADEMARK:**  
logo:



Trademark ID: R.197408

logo:



Trademark ID: R.197409

---

#### SECTION 2 Product recognition

**2.1. Product type:**  
RUBBER FLOOR MAT

**2.2. Material:**  
TPE Thermoplastic elastomer  
\* standard color of product - black

**2.3. Production recognition:**  
batch number - listed on the label

**2.4. Product recognition:**  
article number - permanently imprinted on the product,  
products dedicated to specific vehicle models

2.5. **Made in Poland**

2.6. **Product labelling and packaging example:**







2.7. **Warranty:**  
2 years

2.8. **Recycling:**  
fully recyclable




---

### SECTION 3 Exploitation and maintenance

3.1.	Do not attempt to modify the product as this may affect safety during driving.
3.2.	Rubber floor mats provide protection to the vehicle floor and the interior lining.
3.3.  	Make sure to correctly choose the floor mat for your car model.
3.4. 	Make sure that your driver's floor mat has "clips" installed to prevent the mat from sliding across the floor.
3.5. 	If the "clips" are not assembled, install them in accordance with the instructions provided (Appendix 1).

**Properly installed "clips" as an example:**

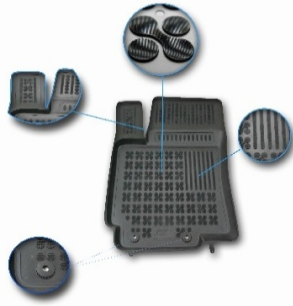


**Advice:** Regularly ensure that the floor mats are secured.

	<b>CAUTION!</b>
	Attach the floor mat to both fixing points so that it won't slip out of position and interfere with the use of the pedals.
	Do not place additional floor mats or any other covers/linings. Floor mats could interfere with the operation of the pedals.
	Make sure that the driver's floor mat does not block the accelerator, brake or clutch pedals.
	Make sure at all times that no objects can fall under the driver's feet while driving. Any loose objects can get trapped under the pedals, causing you to lose control of the vehicle.
	To avoid the risk of suffocation, keep the plastic bags away from babies and children.
	To avoid accidental injuries, use caution while using any tools.
	The product may contain small objects (fixing clips) which are not appropriate for children.
	In case of visible damage or wear, replace the product with a new one.
3.6.	<b>We recommend cleaning the floor mats as follows:</b> 1. Remove dust and dirt with a vacuum cleaner. 2. Wash the rubber floor mats with mild soap and warm or cold water. 3. Allow the floor mat to dry completely before placing it back in the vehicle.
3.7.	If you have any questions, please contact our customer service team, we will provide the best and professional service.

## Appendix 1.

INSTRUKCJA MONTAŻU DYWANIKÓW  
ASSEMBLY INSTRUCTION OF FLOOR MATS  
INSTRUCTIUNI DE ASAMBLARE  
A COVOARELOR DE INTERIOR

REZAW-PLAST

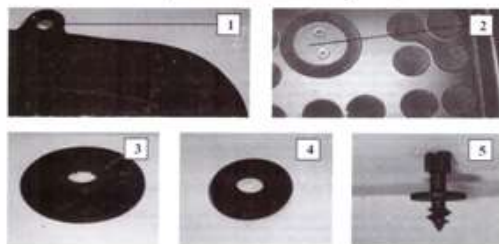

### ASSEMBLY INSTRUCTION OF FLOOR MATS

1. Cut off the hooks (1) on which the floor mats were hung up.
2. Place the floor mats inside a car. Check the locations of any retention devices on the floor and mark them on the floor mats.  
Cut holes at the marked spots (2).
3. In the prepared holes, from underneath of the floor mat put the bottom elements of clips (3) in. Place the floor mat on the car's floor, so the pins (if there are ones) originally mounted on the floor go through the holes. Put the upper elements of the clips (4) on the pins and press until they shut.
4. In case there are no holes or pins on the car's floor originally, please go over the following steps at first:
  - \*Place the floor mat on the car's floor and locate the spots to be used for the clips.
  - Attention:** please make sure the driver's floor mat is not blocking the pedals.
  - \*With a sharp tool (screw or needle tool) make holes in the original carpet.
  - Attention:** be careful not to damage the metal base of the floor.
  - \* In the holes install the plastic pins (5). Then go over the steps 1-3.

**Example of product labelling and packaging**

